 




FIGURE(1)

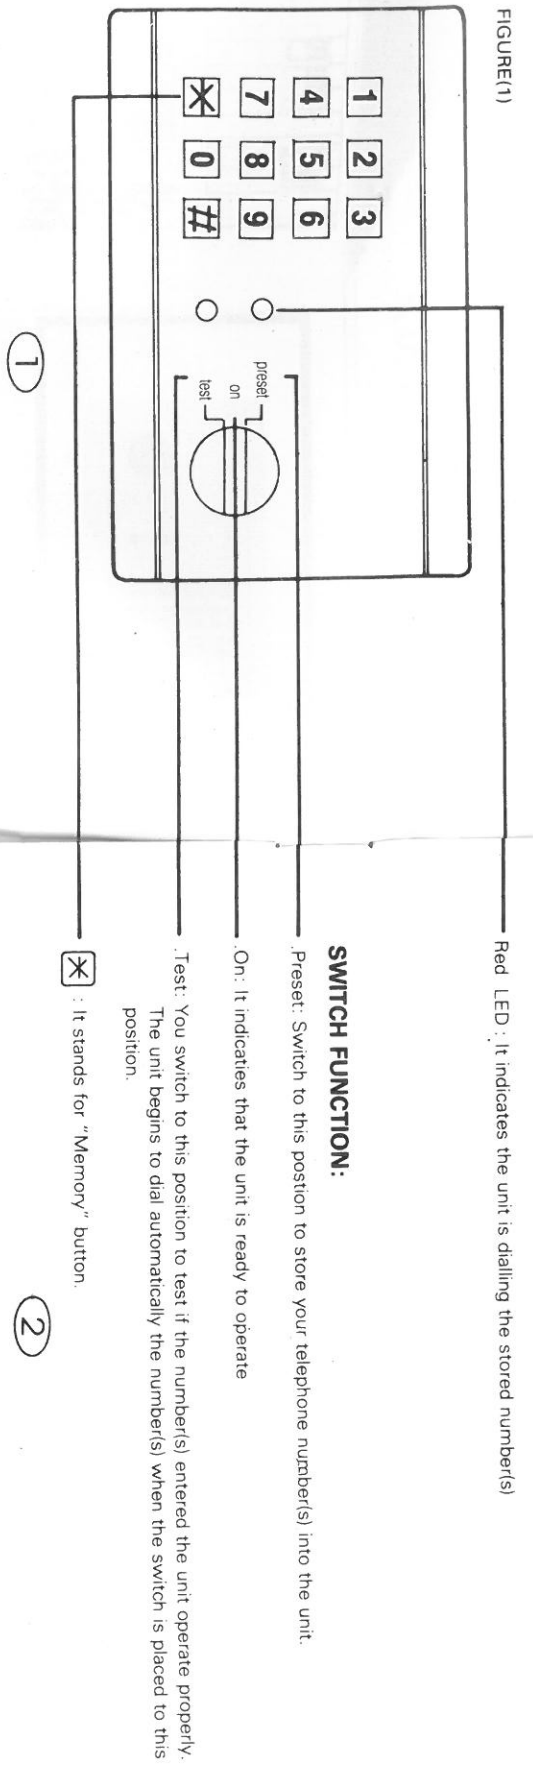

1

2

  FIGURE(2)

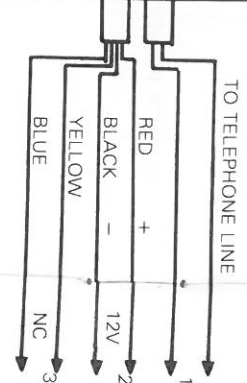
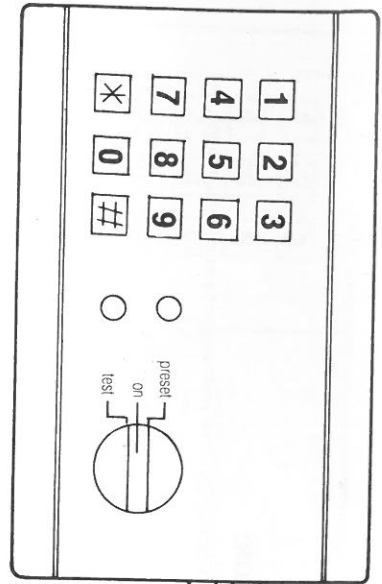


1. Connect the two thread wires green/red 1 to the telephone box (No polarity needed).
2. Connect the red(+) /black(-) wire (2) to the alarm control panels' 12V output terminals (i.e. the same power source of the terminal of P.I.R. sensor).
3. Connect the yellow/blue(3) wires to the "Relay contact" "C" (common) and "N.C" (normally closed) terminals of the burglar alarm control panel. (No polarity needed).

3

4

OPENING UP THE CASE:

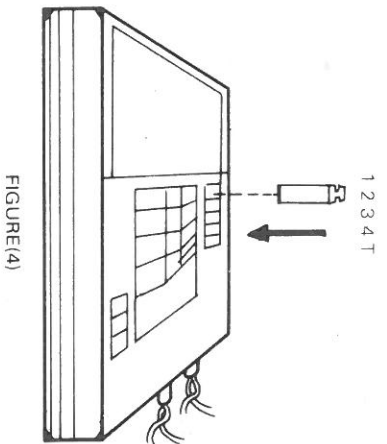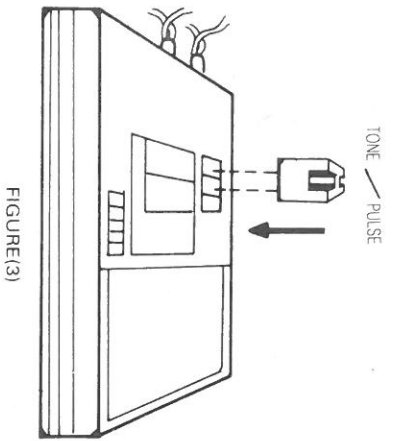

5

1. Place the pin on "pulse" or "tone" position, depending on the telephone system of your country.
2. This telephone dialer is capable of dialling maximum 4 telephone numbers automatically in the sequence of your preset programming, depending on the 5 selection pin positions. FIGURE(4)

Position 1 : Dial first number only.

Position 2 : Dial second number only.

Position 3 : Dial third number only.

Position 4 : Dial fourth number only.

Position T : Dial from first thru fourth numbers.

To prevent from forgetting the numbers stored, it is suggested that you write down the stored numbers on the slip.

HOW TO PROGRAM THE NUMBER(S).

First turn the switch to "preset" position and enter the telephone number(s) you desire as in the following manner:

1. Press ☒ button, then the first telephone number and press again the ☒ button and number 1. For example, the first number is 2614366, press ☒ then enter 2614366 and then press ☒ again and lastly number "1". (☒ number 1).
2. For entering the second number, press ☒ button followed by the second number and press again ☒ button and press lastly number "2". (☒ number 2).
3. For the rest, please follow the same process in the like manner as described above.

6

Remarks:


1. If the numbers you store vary in area code numbers, please be sure to enter the area codes also.
2. It is suggested that the pin be placed on "T" position even if you have or need no 4 numbers to be stored. In that case, you may store the same number(s) repeatedly so that the four available dialings can be automatically repeated.
For example, if you have stored only the following two numbers 1234567 and 3521678, be sure to repeat entering the same two numbers as the no. 3 and 4 numbers respectively. Then the dialer will continue to dial automatically, in the sequence 1234567-3521678-1234567-3521678 until the "auto stop" of control unit deactivates it.
3. Press the red Mirco Switch for recording the message. **FIGURE(5)**
For effective and efficient recording please keep the distance between your mouth and microphone at about 8 inches. And the max. recording time is 16 seconds. **FIGURE(6)**

Remarks:


1. The LED will turn off while it is recording by pressing the red Mirco Switch, However, be sure to release it immediately after the recording, when the LED will light up again.
2. Regardless of the time of recording process, it will automatically stop after 16 seconds and LED will light up.

7

FIGURE(5)

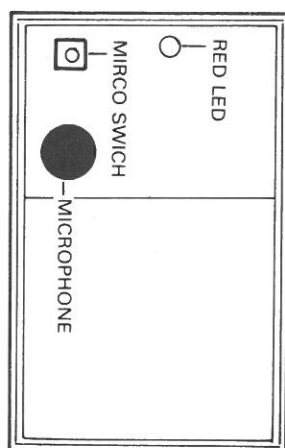

FIGURE(6)

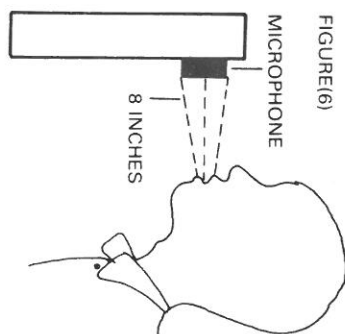

5. After storing the number(s) turn the switch to "TEST" position for testing the dialing function
6. When testing is found satisfactory, put the switch to "On" position.
The dialer is now ready to operate.

8

FEATURES:

1. Switchable to tone/pulse.
2. Three positions: "PRESET", "ON" and "TEST"
3. LED display.
4. Store total 4 telephone numbers; each number 16-digits max.
5. When the line is busy or unresponsive, the dialer will automatically route to the next numbers.
6. Security dialer SA-117 can be connected to all kinds of control panels of burglar alarms.
7. Dialing stops when alarm system is deactivated.
8. Alarm transmits intermittent signal sound.
9. A voice recording system which records your own message 16 seconds.

9

SPECIFICATIONS:

Memory capability: 4 numbers, each 16 digits max.
Operating voltage : DC 11V to 16V.
Stand-by current: 35mA AT 12V DC.
Operating current: 70mA AT 12V DC.
Break ratio:
Dialing rate: 10 pulse-per-second.
Dialing and receiving time: approx. 45 seconds per each phone number.
Message recording time: 16 seconds max.

10



EVERSPRING
SA-117
SECURITY DIALER + MESSAGE

EVERSPRING **SA-117**
SECURITY DIALER + MESSAGE

